

NIL-Tech



NIL-Tech Pencil Sharpener Guide

Pencil Sharpener

AMAZING QUALITY & PERFORMANCE FROM A COMPACT PENCIL SHARPENER: Built with the needs of artist, teachers, students, this electric pencil sharpener best in performance and durability. Crafted from high-quality materials, it does the job right every time.


Pro Features:

- Ultra durable helical blade.
- Quiet operation.
- Multiple power sources (4 x AA (batteries not included), AC, USB).
- Auto-stop sensor prevents from oversharpening pencils.
- Larger shaving bin (25ml).
- Sharpens wood, composite and recycled pencils (6.5- 8mm).
- Improved sharpness adjuster.
- LED lights up when the device is in use.
- Anti-slip pads prevent the electric sharpener from moving while being used.

Special Safety Features:

- Sharpener stops immediately if the shaving bin is removed.
- Auto stop sensor: The helical blade stops when desired point is achieved.

How to Use:

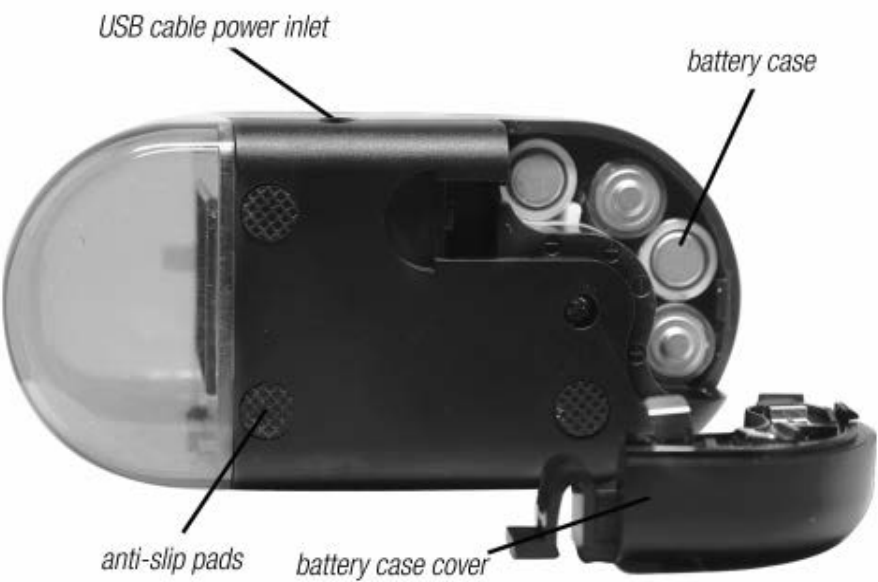

Power Options

BATTERY, USB & AC POWERED: Manual pencil sharpeners can't touch the results offered by this sharpener. Every pencil is sharpened to a perfect point to ensure ease in drawing, coloring, writing and more. Is great for artist, professionals and students.

Power Option



AC Plug:

Insert the AC plug into the nearest, easily-accessible 120 volt outlet.



USB Cord


Insert the USB cord to any 5v 2A power source.(eg. Power bank)



Batteries:

Insert 4 x AA batteries into the battery case located at the bottom of the pencil sharpener with its correct polarity(+) (-).

How to Use:

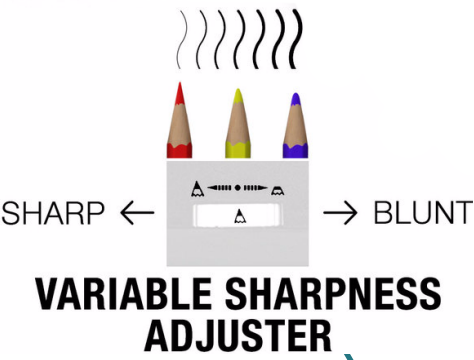

Adjust the thickness of pencil point with size adjuster wheel, the thickness may vary according to pencil type.

Tip: Best result of point adjuster feature you can see if your pencils have thick leads.

Make sure that the shaving bin is inserted correctly

.If not, the machine won't start operating because of its safety feature.



Insert the pencil into the hole straight.


The pencil point will be offset from the core if it's inserted with an incline.

Tip: LED will light up when pencil sharpener is operating. When the pencil achieves the desired sharpness, the device should stop automatically.

Wood shavings will be left on the front end of the pencil after sharpening. This is normal

Tip: Before removing, Half rotate the pencil to reduce any extra clinging wood shavings



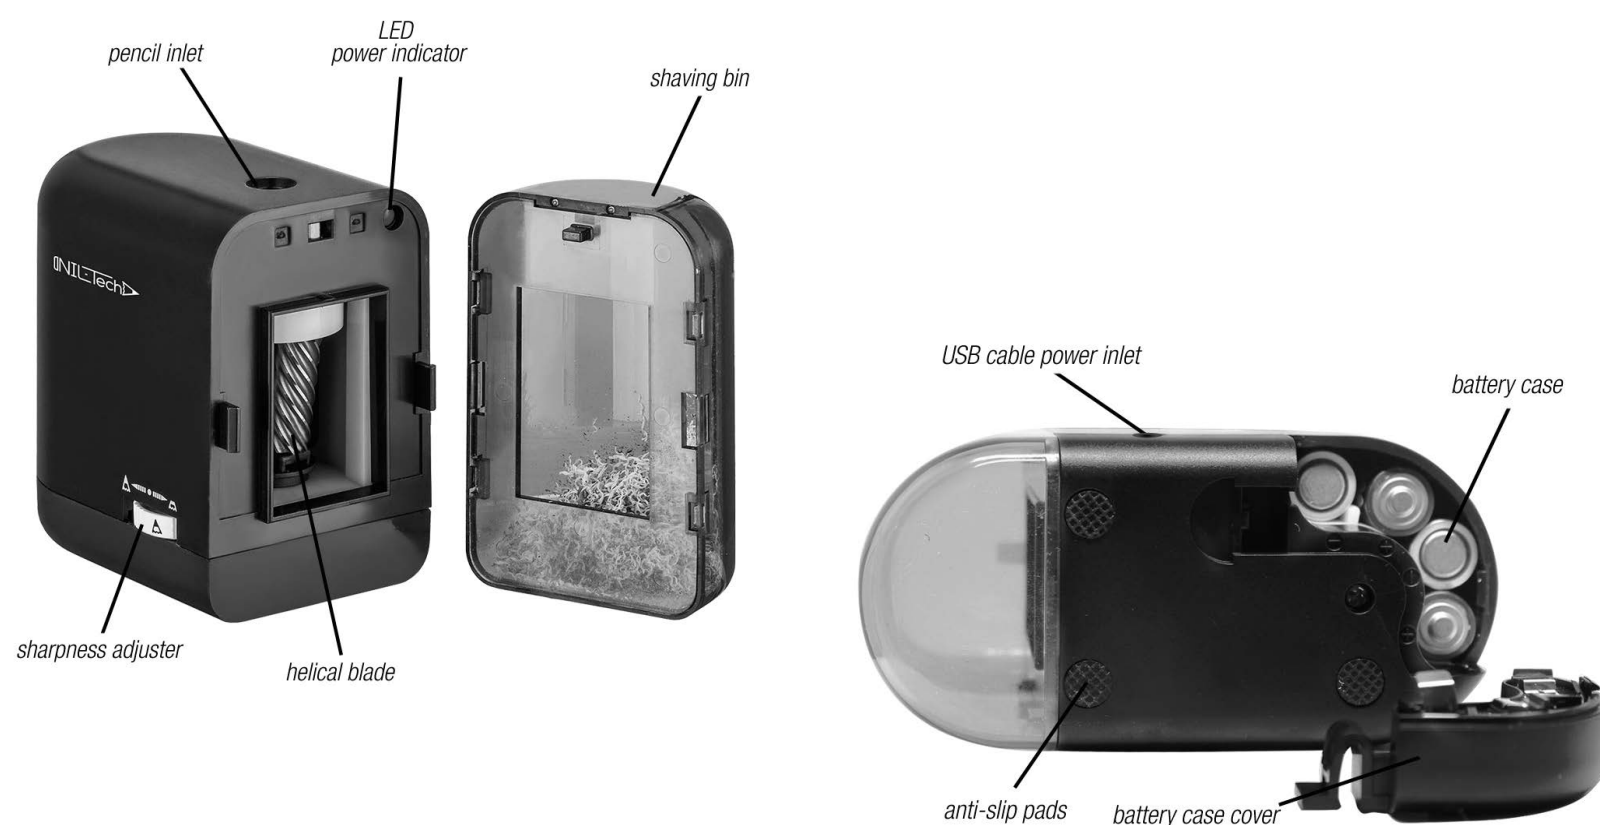

Maintenance & Safety

To ensure smooth, trouble-free sharpening:

- Empty the shaving bin regularly. The pencil sharpener will not operate properly when full.
- Writing instruments such as crayons, chalk, or soft waxy pencils will clog your sharpener's blades. Do not use this machine to sharpen them. Note: Warranty voided when these are used.
- Do not force or shove pencil into sharpener, as too much pressure may cause the motor to jam. If this happens, simply reduce pressure until motor operates normally again.
- Avoid knocking or dropping the pencil sharpener.
- Do not disassemble the pencil sharpener.
- As with all electrical appliances, keep out of the reach of small children.
- Take out the batteries when storing the pencil sharpener for long periods of time.



NIL-Tech



257 Grand Street
Brooklyn NY 11211



niltech@mail.com

<https://nil-tech.com>